

INSTALLATION BULLETIN

MS1 One Stage Electronic Control

Wiring

IMPORTANT: All MS1 controls are designed for use **only** as operating controls. Where an operating control failure would result in personal injury or loss of property, it is the responsibility of the installer to add devices (safety, limit controls) or systems (alarm, supervisory systems) that protect against, or warn of, control failure.

Refer to the *MS Series Multi-Stage Electronic Controls Product Bulletin, LIT-125502*, for necessary information on operation and performance specifications for this product.

Mounting


The MS1 control is not position-sensitive but should be mounted for convenient wiring and adjustment. To mount the MS1 DIN Rail Mount version, install the DIN rail where appropriate. Snap the control onto the rail in position.



WARNING: Risk of Electrical Shock.
Disconnect power supply before making electrical connections to avoid possible electrical shock or equipment damage.

Follow these wiring guidelines:

- All wiring must conform to the National Electric Code and local regulations.
- Make all wiring connections using adequate gauge copper conductors only. Connectors are rated for 14-22 AWG wiring.

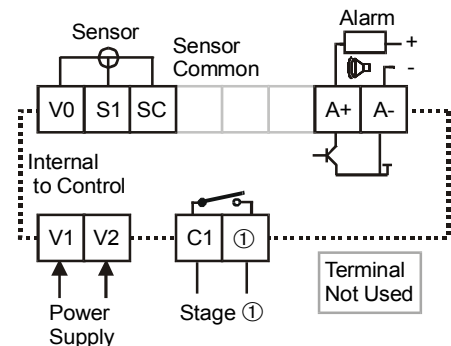

Refer to Rating Table for more information.

Figure 1: MS1 DIN Rail Mount Wiring

Setting Up the Stage Control

Table 1: Control and Sensor Wiring

MS Series Terminal	P99-1V Wire Color	HE-6300 or HE-6310 Terminal
VO	Brown	PWR
SC	Green	COM
S1	White	OUT

Table 2: Rating Table

Rating Category	120 VAC	240 VAC	24 VDC
Horsepower	1/4	1/2	-
Full Load Amperes	5.8	4.9	-
Locked Rotor Amperes	34.8	29.4	-
Inductive (non-motor) Amperes	8	8	8
Pilot Duty VA	275	450	-


Alarm circuit is 40 VDC, 100 mA maximum.

Alarm requires separate power source.

Power supply is 24 VAC.

Terminal VO output is 12-17 VDC.

To lock/unlock the unit for programming



Press the Enter, Up, and Down buttons in sequence and hold until “- -” is displayed. Hold for about 10 seconds until the current condition value is displayed. This toggles the keypad between locked and unlocked.

To run the self test procedure

IMPORTANT: Disconnect loads before beginning self-test procedure. Cycle power to resume normal operation.



Press the Up and Down buttons in sequence, and hold for 5 seconds.

To select the mode of operation



1. Press and hold the Enter and Down buttons simultaneously for approximately 7 seconds.



2. Press the Up or Down button until the desired setting is shown.

1d = Direct 1r = Reverse



3. Press the Enter button to save the new mode of operation.

To change the setpoint



1. Hold the Enter button down for 3 seconds. The display will change to show the setpoint.



2. Press the Up or Down button until you reach the new setpoint.



3. Press the Enter button to save the new setpoint.

Note: If you do not press the Enter button after selecting the new setpoint, it is not saved. The control reverts to old setpoint.

To program other values



1. Hold the Enter button down for about 10 seconds. The display will change to HY.



2. Press the Up or Down button until the desired setting is shown.



3. Press the Enter button. The setting's current value is displayed.



4. Press the Up or Down button until the desired value is shown.



5. Press the Enter button to save the new value. After 10 seconds of inactivity, the display will return to its normal function.

Note: If you do not press the Enter button after selecting the new value, it is not saved. The control reverts to the old value.

Table 3: Functions and Settings

Mode	1d = Direct 1r = Reverse		1d
Setting	Description	Setting Range	Default
SI Setpoint	d, r, relay cut-off point	0 to 99	—
HY Differential (Hysteresis)	Difference relative to setpoint or offset at which the load is switched On or Off	1 to 9	5
LL Low Setpoint Stop	Lower limit of end-user setpoint adjustment	0 to HL	99
HL High Setpoint Stop	Upper limit of end-user setpoint adjustment	LL to 99	90
Cc Anti-short Cycle Timer, Direct	Time delay between equipment On cycles for direct stages	0 to 9 minutes	2
CH Anti-short Cycle Timer, Reverse	Time delay between equipment On cycles for reverse stages	0 to 9 minutes	0
rt Soft Start	Rate at which condition approaches setpoint	0 to 99 minutes/(% or psi)	10
AH High Condition Alarm	High condition alarm On, value relative to setpoint	0 to 50 above setpoint	15
AL Low Condition Alarm	Low condition alarm On, value relative to setpoint	-50 to 0 below setpoint	-15
Ad Alarm Differential	Condition difference relative to high and low alarms at which alarm output is switched Off	1 to 9	5
At Alarm Time Delay	Delay between alarm detection and activation	0 to 99 minutes	15
So Sensor Offset	Compensates for long sensor leads or sensor location	-20 to +20	0
Lr Low Range Analog Input	Adjusted condition value when sensor input is 0.0 VDC	-40 to Hr	0
Hr High Range Analog Input	Adjusted condition value when sensor input is 10.0 VDC	Lr to 99	99
PU Display Refresh Rate	Time delay between display refreshes	1 to 99 seconds	1

Repair and Replacement

Field repair must not be made. In case of defective or improperly functioning control, contact your nearest authorized Johnson Controls/PENN distributor. When requesting a replacement, refer to the model number found on the data plate of the control.

Canadian DOC Compliance

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

FCC Compliance

This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his/her own expense.

Fault/Alarm Codes

Table 4: Fault/Alarm and Status Codes

Error Code (Flashing on Display)	System Status
EE Program failure; control must be replaced.	Alarm message displays, other outputs off.
FI Indicates an open or shorted sensor.	Alarm message displays. Correct problem and cycle power to reset.
HI Condition has reached or exceeded (setpoint + AH).	Alarm message displays. Correct condition to reset.
LO Condition has reached or fallen below (setpoint - AL).	Alarm message displays. Correct condition to reset.

Ordering Information

Table 5: Specifications

Power Requirements	3.7 VA @ 24 VAC, 50/60 Hz, Class 2 (20-30 VAC)
Ambient Conditions	Operating: +14 to +140°F (-10 to +60°C); 0 to 95% RH (non-condensing) Storage: -22 to +176°F (-30 to +80°C); 0 to 95% RH (non-condensing)
Agency Listings	UL Recognized: File E194024, CCN XAPX2 Canadian UL Recognized: File E194024, CCN XAPX8 FCC Compliant per Class A Digital Device, Part 15 Canadian DOC Compliant per Class A, Radio Interference Regulations

Table 6: Ordering Information

Item Code	Description
MS1DR24V-11C	MS1 DIN Rail Mount Control; 0-10 VDC input; sensor sold separately
HE-6300 Series	Humidity Sensor, Wall Mount, 0-100% RH
HE-6310 Series	Humidity Sensor, Duct Mount, 0-100% RH
P99V-1C	P99 Pressure Transducer, 0-100 psi

The performance specifications are nominal and conform to acceptable industry standards. For application at conditions beyond these specifications, consult Johnson Controls/Penn Refrigeration Application Engineering at (414) 274-5535. Johnson Controls, Inc. shall not be liable for damages resulting from misapplication or misuse of its products.



Controls Group
507 E. Michigan Street
P.O. Box 423
Milwaukee, WI 53201

Printed in U.S.A.
www.johnsoncontrols.com.